




Nintendo GameCube Controller Z Button Replacement

This guide demonstrates proper removal of the purple Z-button on the top right of the controller.

Written By: Sean Michel

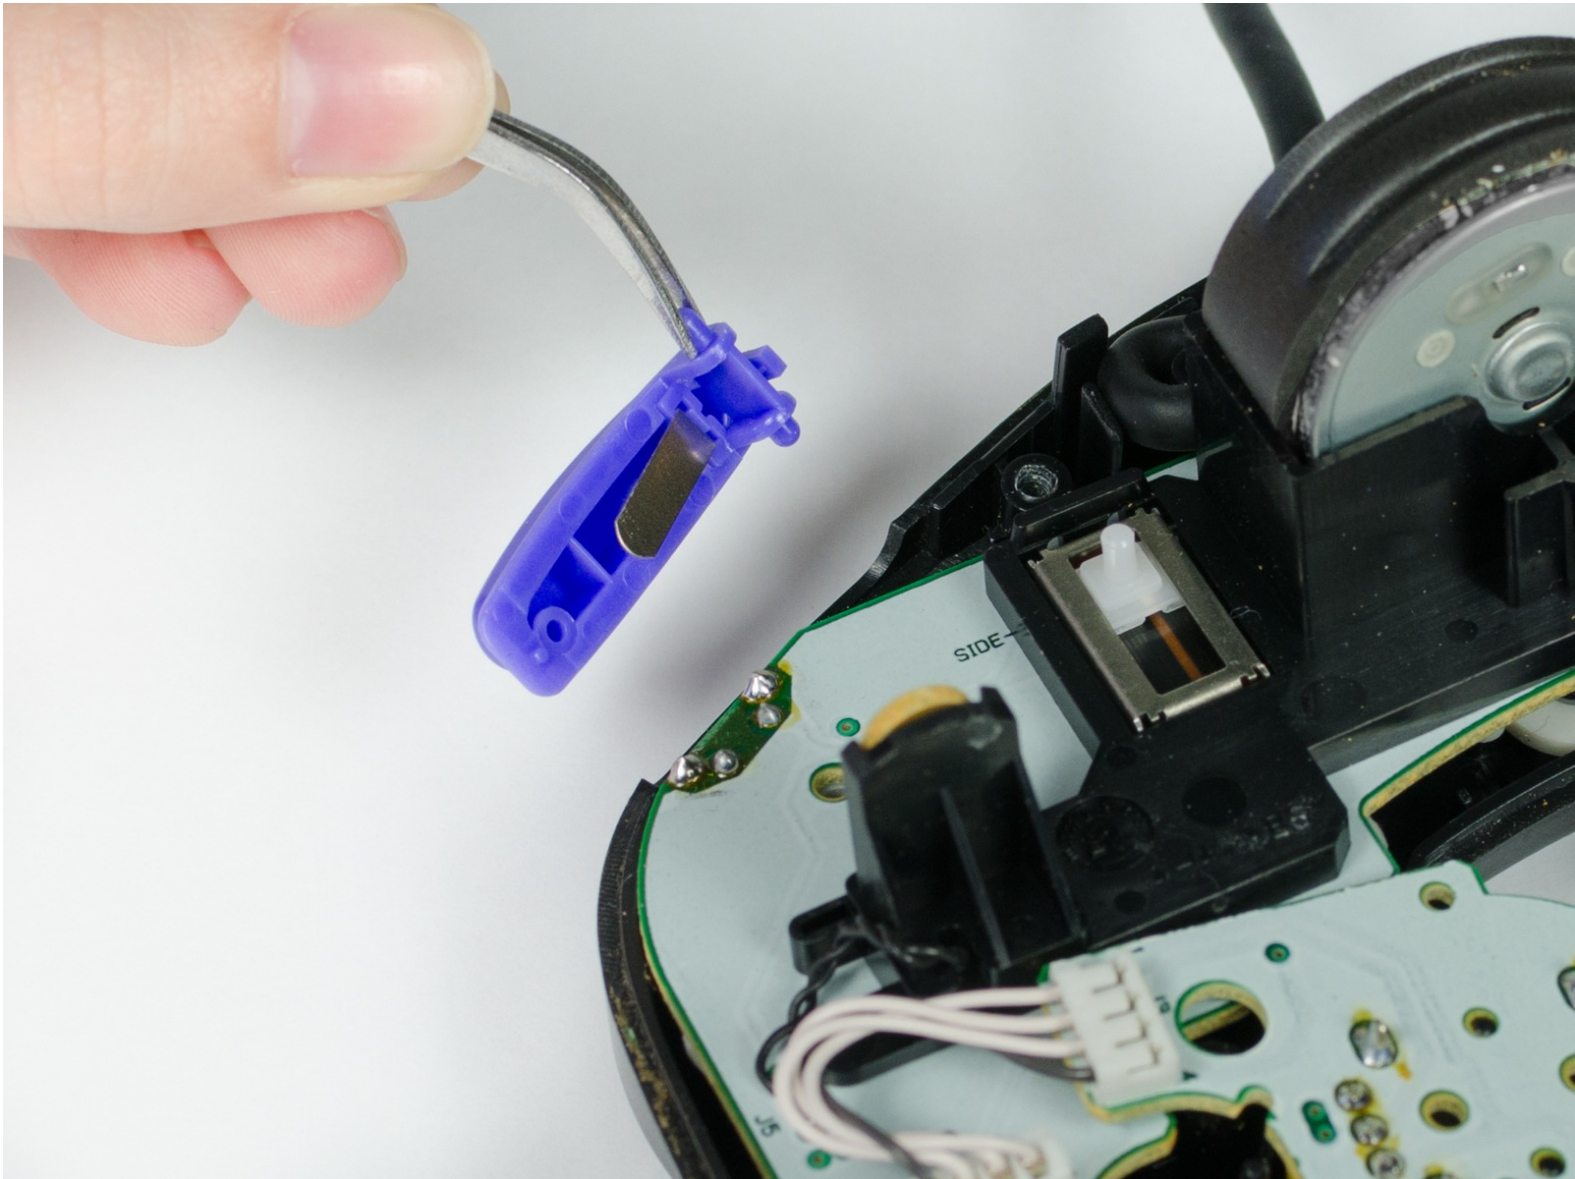

INTRODUCTION

The Z button is located above the right trigger but functions as a button.

TOOLS:

- [Tri-point Y0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel





- Place the controller (buttons down) on a solid surface.
- Remove the six 9.2mm Tri-wing Y0 screws that hold the back panel in place.

Step 2



- Gently lift the back panel up, separating it from the front panel.
- ⓘ Some of the buttons may fall out if they are knocked around.

Step 3 — Z Button

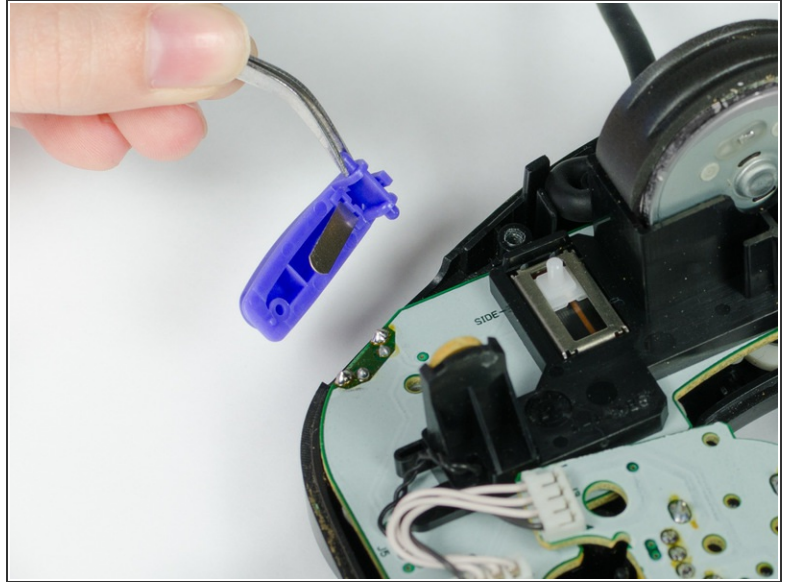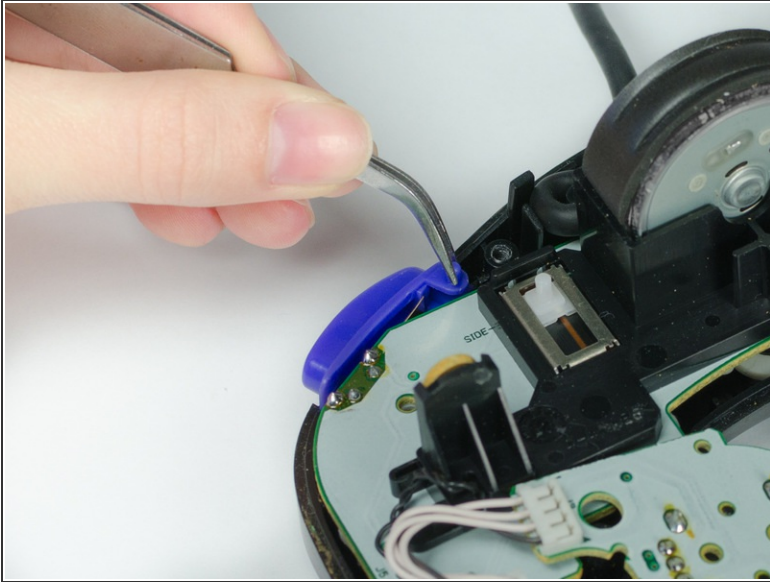

- Grab the Z-button by the peg with tweezers and lift it out of the controller.
- ☑ During re-assembly, make sure the plastic rim and spring fit into the slot provided, or else the case will not shut.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:54:59 PM.